

Product Name: **Light Up Furniture**

**Specification**

Material: PE

LED: non – replaceable multi coloured LEDs

Input: AC 100-240V~ 0.3A Max 50/60Hz

Output: DC 5.0V === 1.0A

**Contents:**

1 x Adaptor

1 x Remote Control (requires 2 x AAA batteries not included)

1 x Light up unit

**WARNING!**

Contains sequences of flashing lights which may affect individuals who are susceptible to photosensitive epilepsy or other photosensitivities.

**Safety Warnings:**

- Before setting up the product, ensure the product is not damaged. If any part of the product is damaged, do not attempt to assemble and use.
- Do not attempt to hardwire this product to the mains electrical supply. This product does not require to be connected to your mains electrical supply. It operates using an adaptor.
- Only use the adaptor supplied with this product and no other adaptor must be used.
- This is not a toy. Children must always be supervised when using this product.
- Always unplug the product before cleaning or handling.
- Keep away from heat sources or naked flame
- Carry out regular checks to ensure fixings, fittings and installation has not become loose.
- This product contains non-replaceable LEDs. If any of the LEDs cease functioning, the whole unit must be disposed of according to your local council guidelines.
- Ensure cable and the product are placed such that no trip, entanglement or strangulations hazards are likely to occur.
- Recommended maximum weight load up to 90kg.

**Before Installation**

1. Before you start, please read these instructions carefully and retain for future reference. Check the contents inside the packaging and ensure you have all the required parts listed and there are no missing parts. If any parts are missing **DO NOT** attempt to assemble the product.
2. Carefully remove the product from its packaging.
3. Ensure a plug socket is within reachable distance, without stretching the wire too much.
4. This unit is rechargeable; therefore, it is advised to charge the unit for between 4-6 hours before initial use.
5. Once fully charged, the unit should work for 8-10 hours, before recharge is required. However please note the longer the unit is left on, the brightness of the light may become dimmer, if this is the case please connect the adaptor to recharge.
6. If the unit is completely discharged, it should not be left discharged for a long time. If the unit will not be used for a long period of time, it is recommended to charge within 3 months to ensure efficient battery life.

**Installation**

1. On the base of the product, the DC port for the adaptor pin to be inserted has been covered by a rubber cover. Pull open the cover. Insert the pin from the adaptor to this port.
2. Plug the adaptor to the mains wall socket and switch on. The unit does not need to be continuously powdered from the mains. Once it has been charged, the adaptor can be removed.
3. To turn the unit on press little white button next to the adaptor DC port. Then the “on” button on the remote.

### **Remote Control Functions**

	Increase and Decrease Brightness		Changes through different colours in Flash mode
	OFF and ON buttons		Changes colours in 3 seconds jump
	Change through various colours in static mode		Colour fades away
	Select main primary colours in static mode		Colour slowly fades away

- To insert batteries in the remote control, open the cover on the back of the remote and insert 2 x AAA batteries – ensuring you follow the diagram in the battery box. Replace the cover and switch on.

**Battery Warnings!** Batteries should only be inserted or changed by an adult. Non-rechargeable batteries are not to be recharged. Be sure to insert batteries with the correct polarities and always follow the product and battery manufacturers’ instructions. Remove batteries from product before extended storage. Always remove old or exhausted batteries from the product. The supply terminals are not to be short circuited. Check that the contact surfaces are clean and bright before installing batteries. Do not bury or burn batteries. Recycle used batteries responsibly. Do not dispose of in household waste.



**Disposal:** The “Crossed Wheelie Bin” symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Please retain this information for future reference.

Made in China