


# Mobile Book Browser





Code: ERMBB

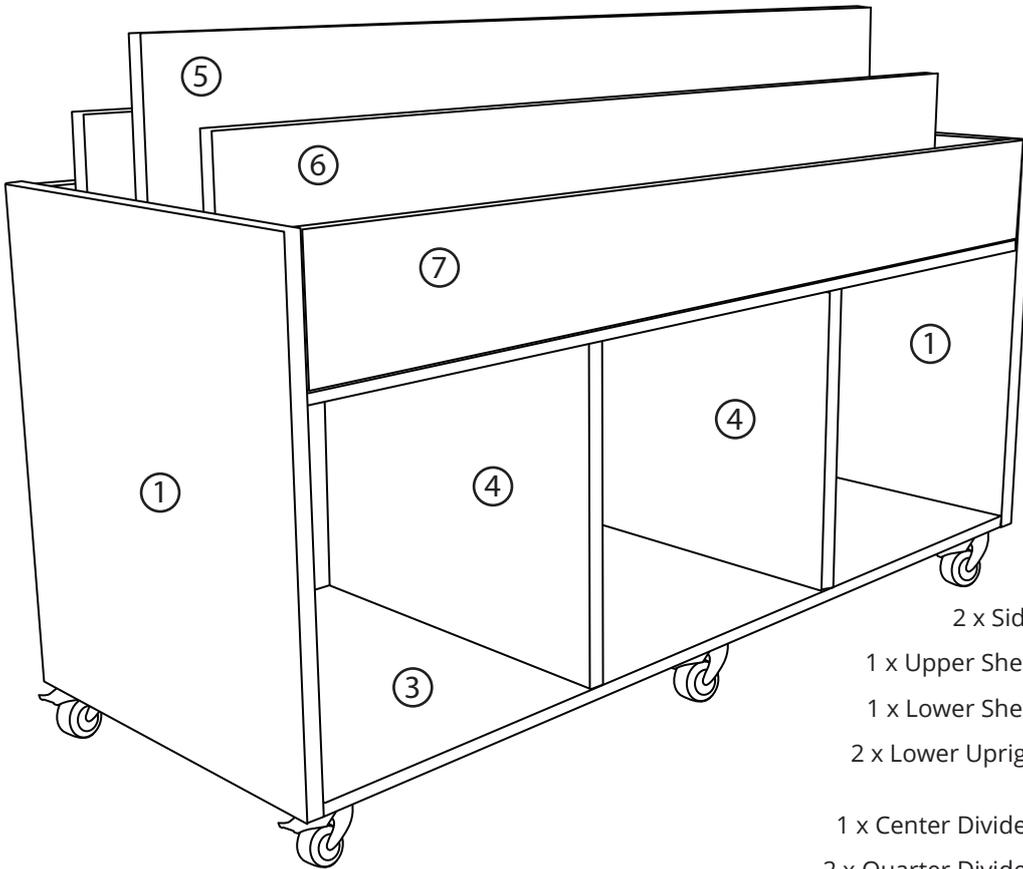

**Contents:**

- 2 x Side Panels - 525x453mm (1)
- 1 x Upper Shelf Panel - 1168x452mm (2)
- 1 x Lower Shelf Panel - 1200x455mm (3)
- 2 x Lower Upright Panels - 375x450cm (4)
- 1 x Center Divider Panel - 1168x295mm (5)
- 2 x Quarter Divider Panel - 1168x215mm (6)
- 2 x Front/Back Panel - 1168x135mm (7)


**Hardware (included)\*:**

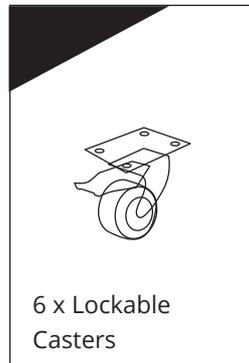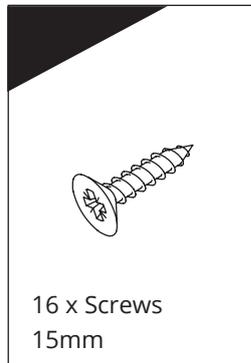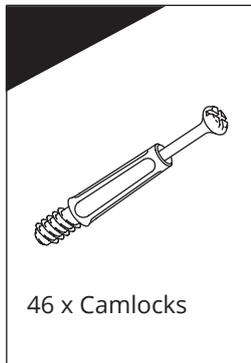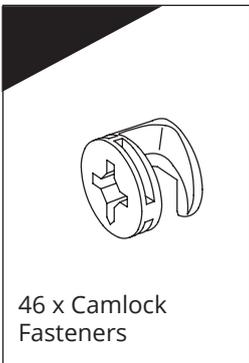

\*Package may contain extra parts

**You will need:**

Drill With a philips screw head

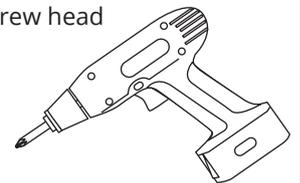

Short philips head screwdriver

**Elizabeth Richards School Supplies PTY LTD**


**Ph: 1300 137 064**

**E: sales@elizabethrichards.com.au**

**www.elizabethrichards.com.au**

## CamLocks

Camlocks create a very simple but strong joint. The Camlock Fastener drills into a pre-made plastic sleeve in the panel. The joining panel will have two holes: one for the Fastener to slide into and another for the Camlock to spin into and lock the tip of the Fastener. The more the Camlock is turned the tighter its grip on the Fastener.

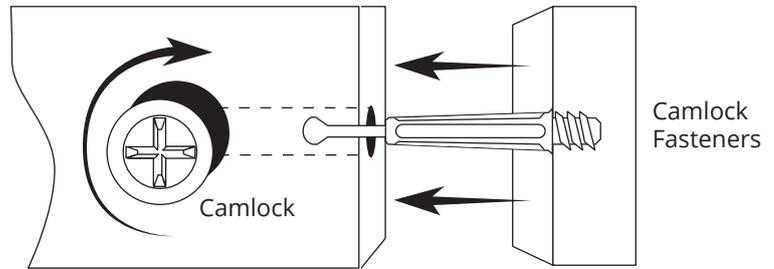





### TIP:

Always place the Camlock with the cross on the outside.  
If the Fastener doesn't seem to be going in all the way, then the Camlock may need to be turned until it hooks the Fastener tip.

**To start: Unpack contents and lay out on the floor. Identify all the parts and read through instructions to familiarize yourself with the construction process.**


## Step 1

Begin by screwing all of the Camlocks into the main pieces. Having all the Camlocks in will help in assembly - making sure everything is in the right position before you use the Camlock Fasteners.

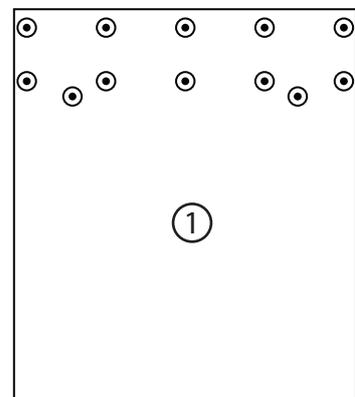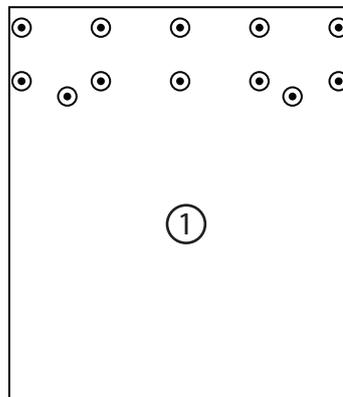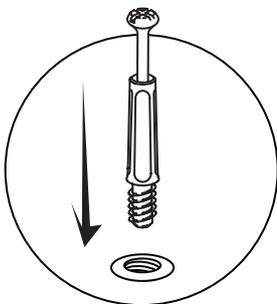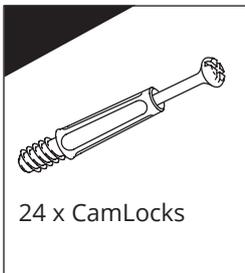


SIDE

SIDE

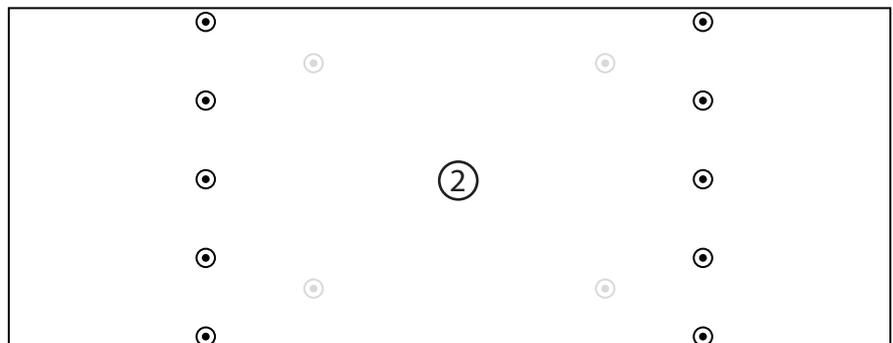

TOP

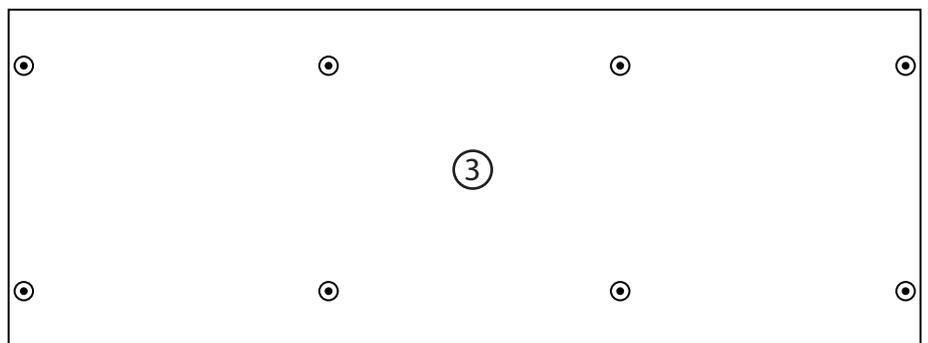



BASE

### TIP:

The easiest way to build the unit is on its' side.  
It also allows for easy access to all CamLocks before standing it upright.

## Step 2

Start with the Upper Shelf Panel ①. Keeping the Upper Shelf upright so as not to damage the Camlocks on the underside, secure each Front/Back Panel ⑦ and Divider Panels ⑤ & ⑥, one at a time with Camlock Fasteners.

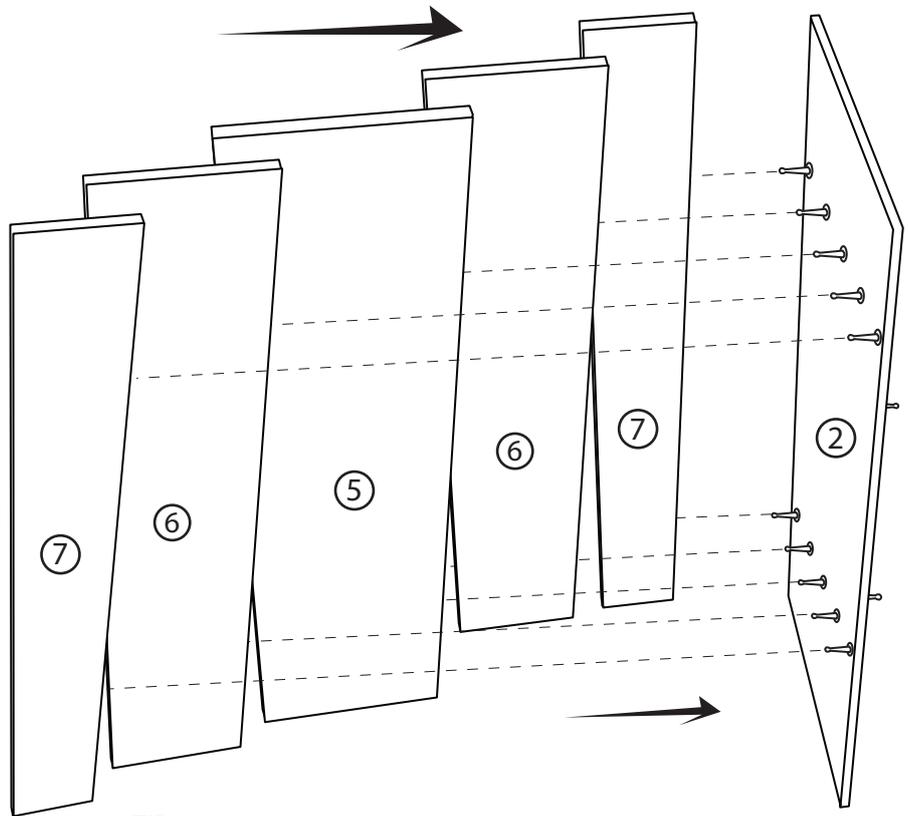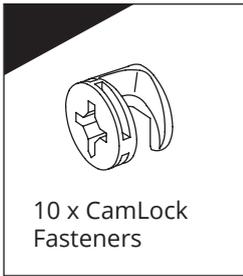


### TIP:

Because of the tight space between each divider it is easier secure one panel at a time, allowing room to get to the Camlocks easily. Note: the last panel ⑦ will need a short screwdriver to get to the Camlock.

## Step 3

Secure the Side Panel ① to one side of the dividers section. Secure the Side Panel in place with Camlocks.

Once the panel is in place tip the unit on its side to allow for easy connection of the remaining panels.

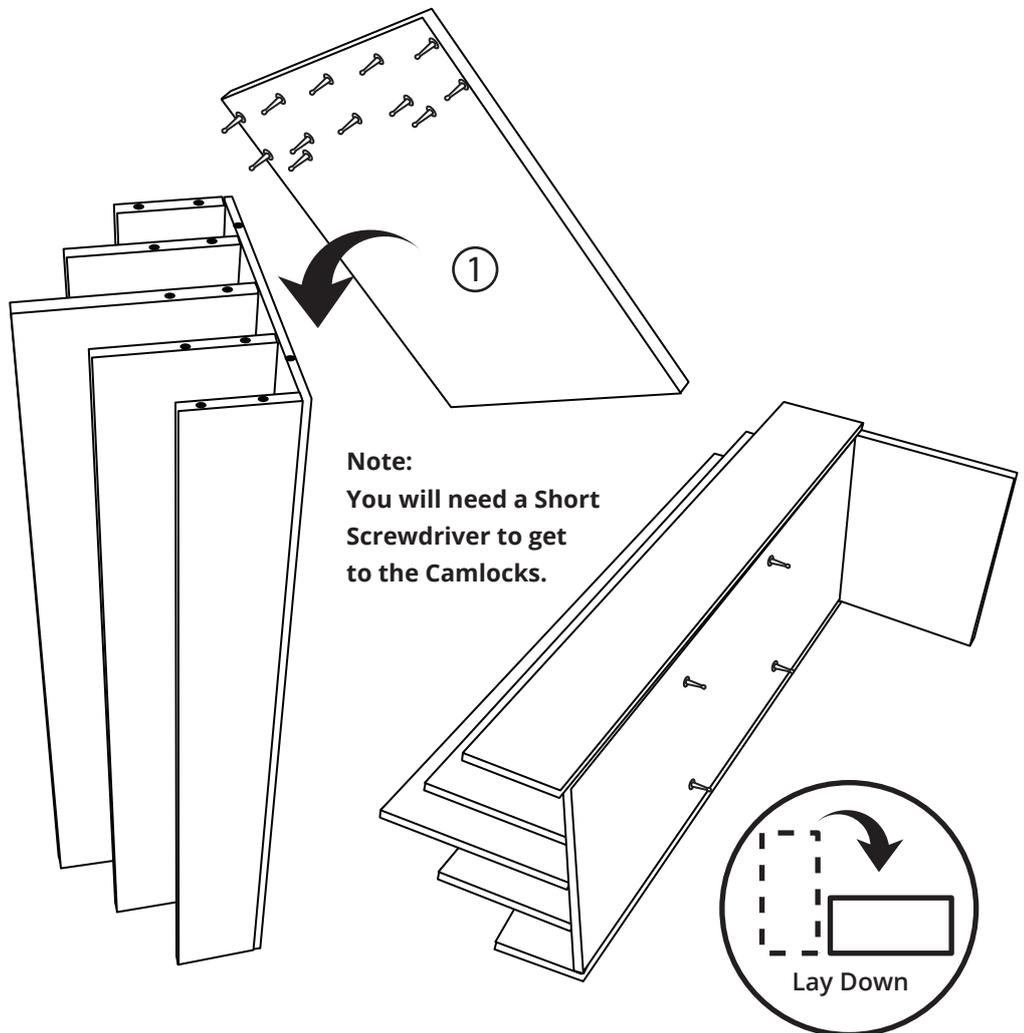

## Step 4

Connect the 2 Upright Panels (4) onto the underside of the unit. Secure with CamLock Fasteners.







## Step 5

Secure the Base Panel (5) onto the unit and tighten with CamLock Fasteners.



## Step 6

Screw in the Casters to each corner of the Base, allowing for about a 1 cm of space to each edge. Then turn unit upright.

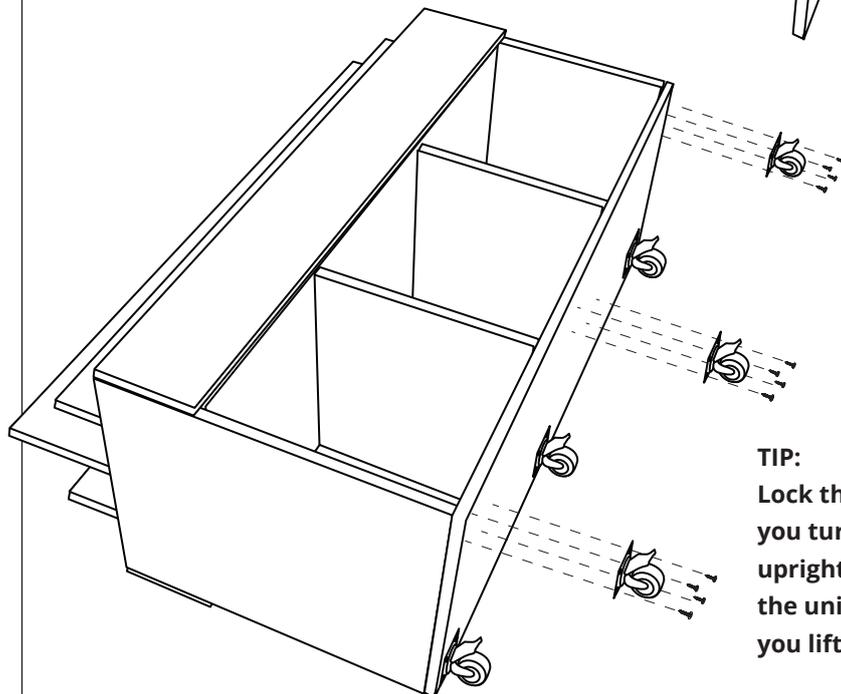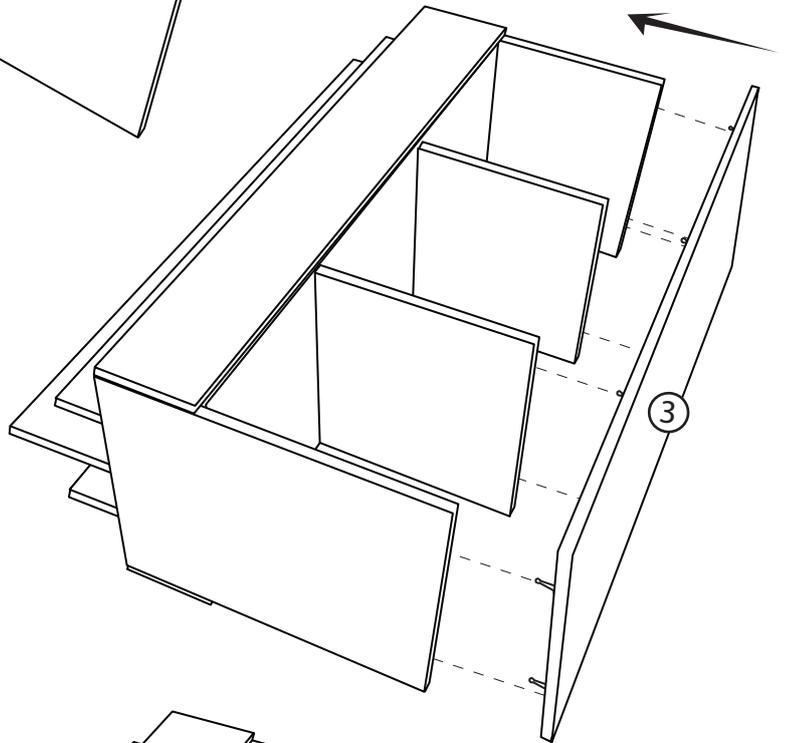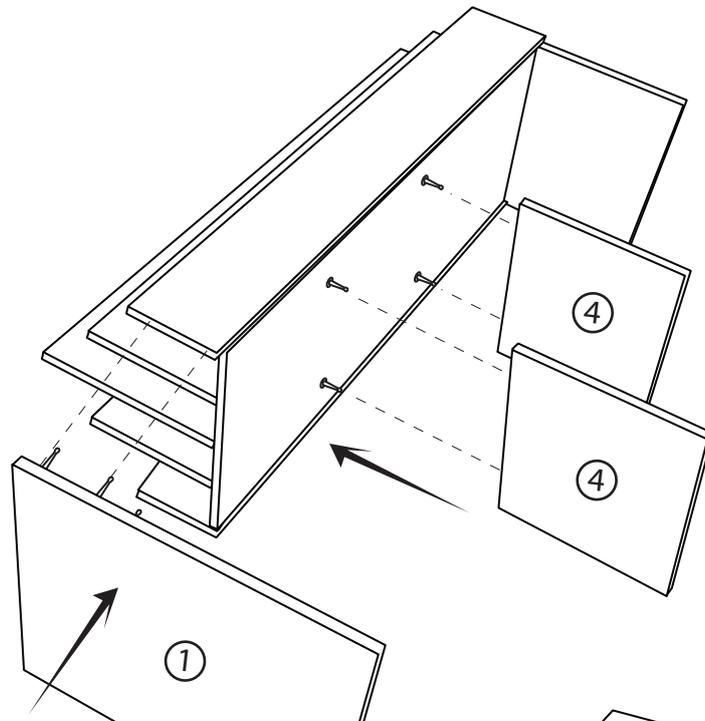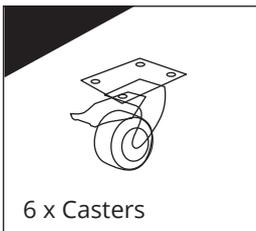

**TIP:**  
Lock the Casters before you turn the unit upright to avoid the unit rolling as you lift.